


Installation new Purivox digital timer

This guide is for installation of the new Purivox digital timer 170418 easy.
 Please follow the steps below for the successful installation.

1. Remove all wires from the old timer
2. Remove the old timer by gently pulling the white clip below the connectors and lift the timer up too remove it
3. Place the new timer over the metal bracket and make sure it is lined up in the correct angle. Gently press the timer down.
4. You should hear a click once the timer is in place
5. Reconnect the wires with the new timer using the installation drawing below

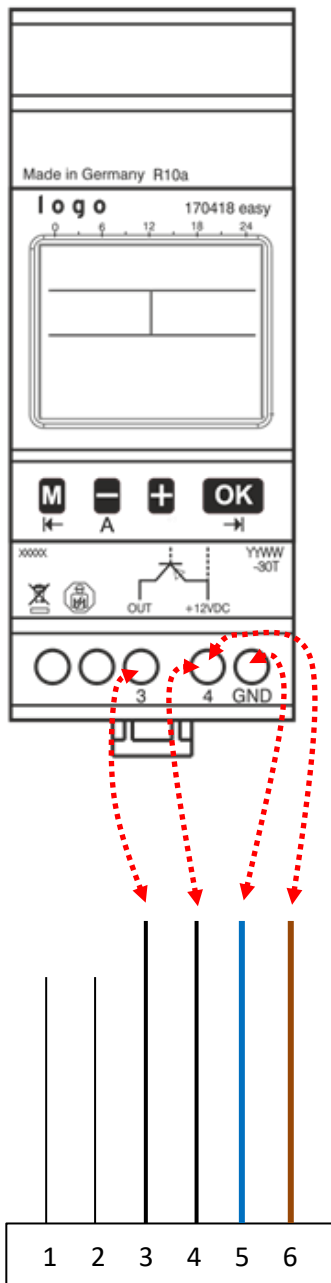

6. The drawing at the bottom shows the 6-pin connector.
7. The first two wires (1 and 2) are the ON/OFF switch
8. Wire number three will be connected with **connector slot 3** at the timer
9. Connect wire 4 along with wire 6 (brown) to **connector slot 4** at the timer
10. Wire 5 (Blue) will connected to GND

For the setup please download the Save`n Carry App from the Google Play Store



Purivox GmbH
 Hauptstraße 11
 67308 Ottersheim / Germany
 +49 6355/95430
 info@purivox.com